


# CharGriller Akorn Kamado

## Adaptor installation

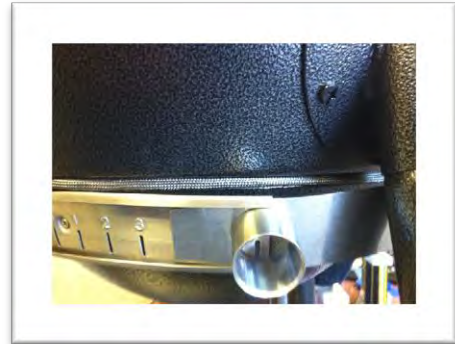

**Step 1:** Remove right screw from lower damper track



**Step 2:** Slide adaptor into track from right side



**Step 3:** Slide adaptor all the way over to the left



**Step 4:** Screw damper track back on

**Step 5:** Push fan into adaptor sleeve and installation is complete.



