
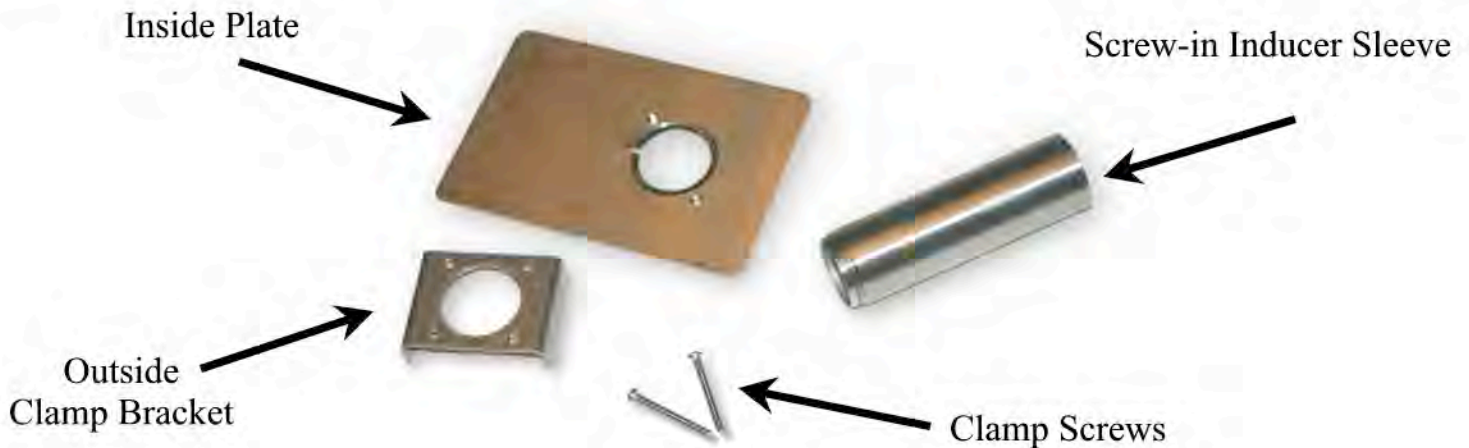


# Universal BBQ Guru Mounting Adaptor for Backwoods Smokers

(May be used on all models except the Patio model.)

FRONT VIEW OF DAMPER DOOR  
LOOKING FROM OUTSIDE OF SMOKER

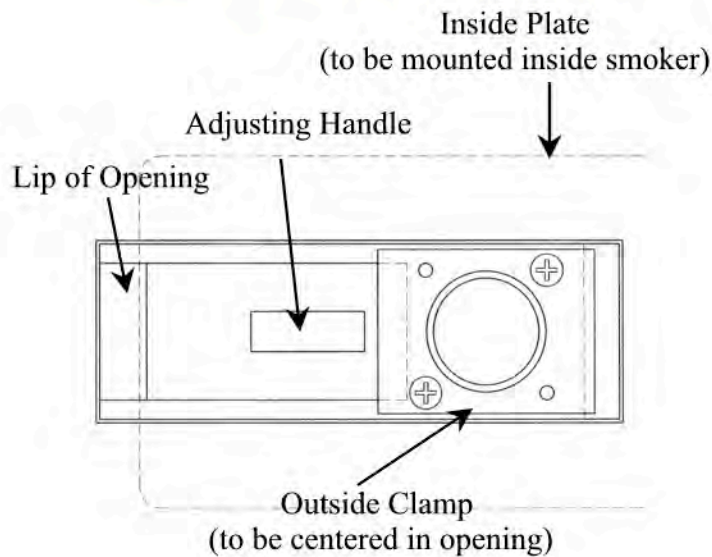

1. Place the Inside Plate on the inside of the smoker making sure you cover the damper opening.
2. Screw the inducer sleeve in from the outside (hand tighten only)
3. Place the Outside Clamp Bracket over the inducer sleeve, clamping it over the damper track.
4. Close damper door until it contacts clamp screw.
5. Screw the Outside Clamp Bracket to the Inside Plate with the 8-32x1 1/2 screws.